

ThermoFlex - To Enter Diagnostic Loop

Service Function

To enter the Service Function:


Press and hold enter and then press mode - mode - mode

The controller will beep, if not redo holding enter and then press mode - mode - mode

Press mode to display SP, press mode again to display Setup.

You have 60 seconds to press mode or the Service Function will time out.

----- indicates press and hold

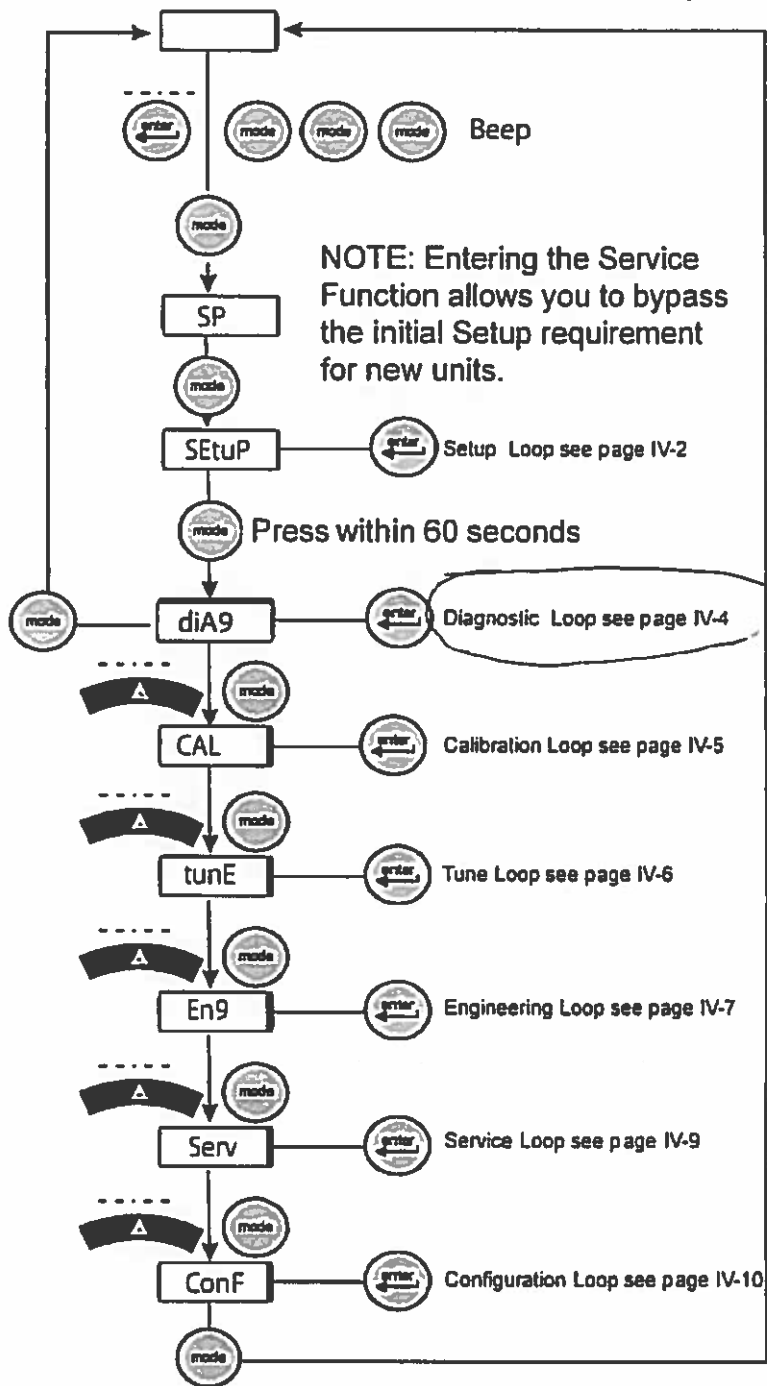

Diagnostic Loop (dia9)

