

## **Danfoss Controller**

## How to offset the control probe value

Description: If a certified independent probe is used to check the inside cabinet temp and it does not match the set point on the Danfoss, a control probe offset can be performed.

**Danfoss Controller** 

Revision Date: Nov. 6, 2020

By: Wayne Anders

- Press and hold the up and down arrows together for 5 seconds until you see PAS/000.
- Press the down arrow 10 times to 990, press the SC button, you will see PS3/tHE.
- 3) Press the down arrow 12 times to "ASi". Press the SC button and you will see "uSA"
- 4) Press down arrow once you will see "tlA" press the SC button, default value 0.0 appears.
- 5) Press the up arrow for a positive offset or the down arrow for a negative offset.
- 6) Press SC to save this change and then press defrost twice to exit and return to cabinet temp.

Temp should slowly start changing inside the unit to match setpoint.